

## SECTION HH

### THE REAR AXLE

(Series RME and RMF)

General Description.

Lubrication.

- |                   |  |
|-------------------|--|
| Section No. HH.1  | Removing a half-shaft, hub and brake plate assembly.                           |
| Section No. HH.2  | To strip and reassemble a hub and brake plate assembly.                        |
| Section No. HH.3  | Removing the rear axle from the car.   |
| Section No. HH.4  | Important points concerning axle attention.                                    |
| Section No. HH.5  | Dismantling the axle and removing the differential assembly.                   |
| Section No. HH.6  | Dismantling the differential and crown wheel assembly.                         |
| Section No. HH.7  | Examining parts for wear.  |
| Section No. HH.8  | To replace a differential cage.  |
| Section No. HH.9  | Assembling differential and crown wheel.                                       |
| Section No. HH.10 | To replace pinion.   |
| Section No. HH.11 | To fit a new axle casing.  |
| Section No. HH.12 | To fit a new axle housing cover.   |
| Section No. HH.13 | To replace a crown wheel and pinion having markings different to the original. |
| Section No. HH.14 | Reassembling the axle.   |
| Section No. HH.15 | Refitting the axle to the car.   |

#### GENERAL DESCRIPTION

The rear axle is of the semi-floating type. It is of unit construction and no repairs or adjustments, apart from those connected with the half-shafts and rear wheel bearings, brake-drums and shoe mechanism, can be carried out without removing the complete axle unit from the car.

The axle shafts are flanged at their outer ends to form the attachment for the brake-drums and wheels. The shafts are each carried in a ball bearing which is located in a housing bolted to a flange on the axle casing. There is also an oil seal at this point.

Hypoid-type final reduction gears are used and the axle housing is divided close to its centre for assembly purposes, the pinion assembly being mounted in the right-hand half or axle casing.

The bearings of the differential and crown wheel assembly are carried in recesses machined in the axle casing and cover, which are bolted together, and, since no inspection apertures are provided, **all adjustments have to be carried out by pre-measurement in conjunction with special gauges.**

Adjustment of the position of both the crown wheel and the pinion in the axle is effected by distance-pieces, which are selected on initial assembly, and there is no other provision for adjustment. The crown wheel and pinions are only supplied in pairs as heretofore.

The use of Hypoid gears enables a much larger pinion to be used, providing more silent running and a greatly increased life.

## LUBRICATION

Oil is introduced to the axle through a filler plug on the right-hand side of the pinion housing. When replenishing or refilling, the level of the oil should not be raised above the lip of the filling aperture.

**It is of the utmost importance that only HYPOID oils of the approved grades and manufacture be employed if satisfactory service is to be obtained from the Hypoid gears.**

Inspect the oil level every 1,000 miles (1600 km.) and replenish if necessary to the level of the filler opening with Hypoid oil to Ref. B (page P.3).

After the first 500 miles (800 km.) and subsequently every 6,000 miles (10000 km.) drain off the old oil and refill with new.

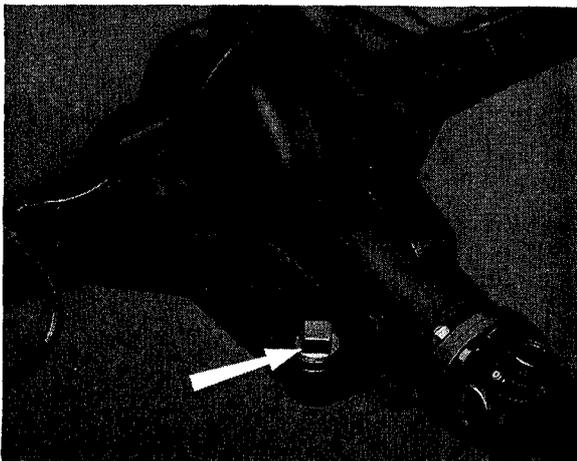


Fig. HH.1.

The arrow indicates the combined filler and oil level plug for the rear axle.

The drain plug is underneath the rear end of the axle casing. The capacity of the axle is 2½ pints (1.4 litres).

Lubrication of the rear hub bearings is achieved automatically from the main oil supply and no provision is made for any other attention.

## Section HH.1

### REMOVING A HALF-SHAFT, HUB AND BRAKE PLATE ASSEMBLY

Jack up the axle and take off the hub cover and wheel.

Detach the brake pull rod at the expander unit on the rear axle and disconnect the hydraulic brake pipe union.

Undo the three countersunk screws holding the brake-drum to the axle shaft and lift the drum off.

Remove the self-locking nuts holding the brake back-plate, hub, and half-shaft assembly to the flange on

HH.2

the axle casing and then pull the whole assembly away.

Remember to bleed the brakes (Section M.3) after replacing the assembly.

## Section HH.2

### TO STRIP AND REASSEMBLE A HUB AND BRAKE PLATE ASSEMBLY

Withdraw the half-shaft and hub assembly (Section HH.1).

Bend back the locking tab securing the large nut behind the bearing and unscrew the nut.

Press out the half-shaft, leaving the bearing in the hub.

Remove the bolts holding the brake backplate to the hub bearing housing and lift the brake back-plate assembly away.

Press out the bearing and carefully extract the oil seal.

Reassembly is a reversal of this process, but make quite sure that the oil seal and the part of the shaft upon which it bears are in good condition and free from score marks before refitting. Make sure also that the lip of the seal is towards the bearing and is not damaged when refitting the half-shaft.

## Section HH.3

### REMOVING THE REAR AXLE FROM THE CAR

Raise the car by means of a suitable jack and place supports under the chassis just forward of the front ends of the rear springs.

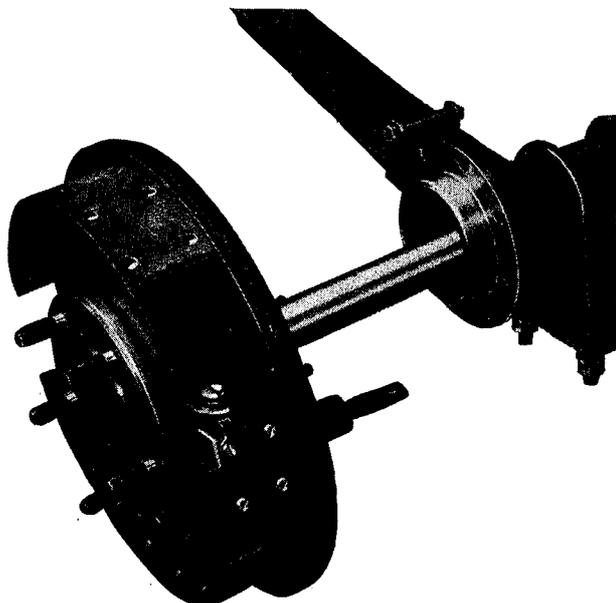


Fig. HH.2.

The half-shaft, hub, and brake assembly partially withdrawn.

Remove the rear wheels and disconnect the hand brake cable from the balance lever on the axle casing by extracting the clevis pin.

Disconnect the hydraulic brake flexible hose from the union and bracket on the right-hand side of the chassis frame. (See Section M.14.)

Mark the propeller shaft and axle drive flanges to ensure correct replacement and disconnect the rear end of the propeller shaft.

Support the weight of the axle on a mobile hydraulic jack. Unlock and remove the "U" bolts on each end of the axle and swing the telescopic dampers and their anchor plates clear of the axle and springs.

sizes. The fitting of a replacement axle, when possible, is advised.

Dismantling for examination and cleaning is permissible provided care is taken to refit the distance-pieces and spacers in exactly the same locations.

No adjustment is provided in the accepted sense. The crown wheel and pinion are set in their correct relation to each other by means of distance-pieces and spacers selected to provide the correct location of the components on initial assembly. Should the components be dismantled, their relative positions should be carefully observed and each part marked

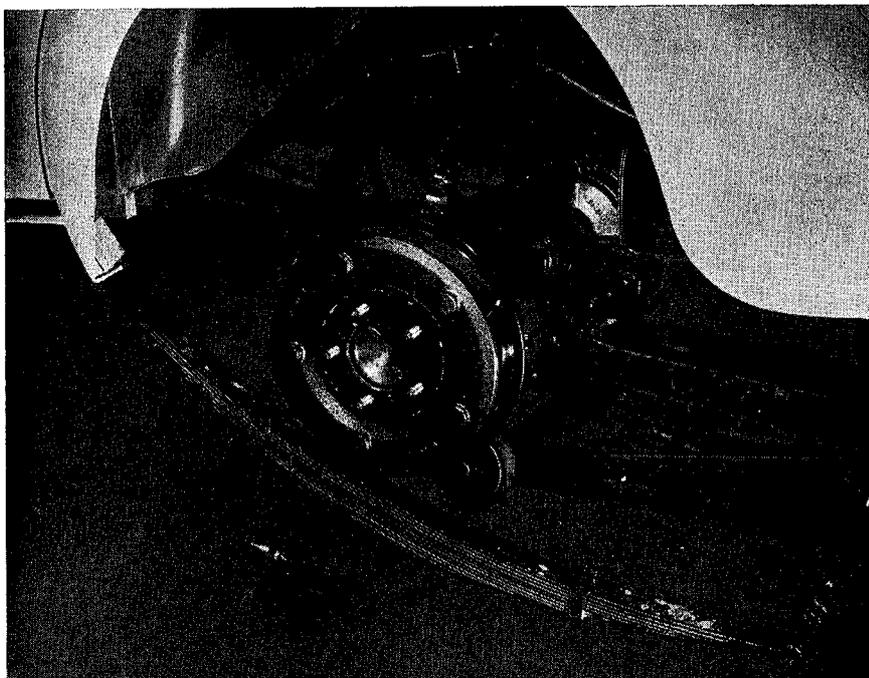


Fig. HH.3.  
The axle is here seen as it is lowered from the car on the jack.

Remove the self-locking nuts and the plates from the rear shackles, remove the shackles and lower the spring ends to the ground.

Lower the axle gently with the jack and withdraw it from the car.

## Section HH.4

### IMPORTANT POINTS CONCERNING AXLE ATTENTION

**Attention requiring the dismantling of the axle and the replacement of parts is not advised unless this is absolutely necessary and unless you are equipped with the necessary checking gauges and a full range of distance-pieces and spacers from which to select the required new**

suitably so that it can be reassembled correctly in its original position.


Various components can be replaced by correctly combining the markings on the original components against those on the new parts in the manner detailed in subsequent sections.

It is important that the repairer be quite clear on this point before he undertakes the dismantling of the axle.

Spacers between the outer races of the differential bearings and the faces of the recesses machined in the axle casing and cover control the position of the crown wheel in relation to the centre line of the pinion.

Adjustment of the pinion position is made by varying the thickness of the pinion washer, and that of the crown wheel by the varying thickness of the differential bearings spacers.

**THE RILEY 2½ LITRE  
(Series RMF)  
REAR AXLE COMPONENTS**

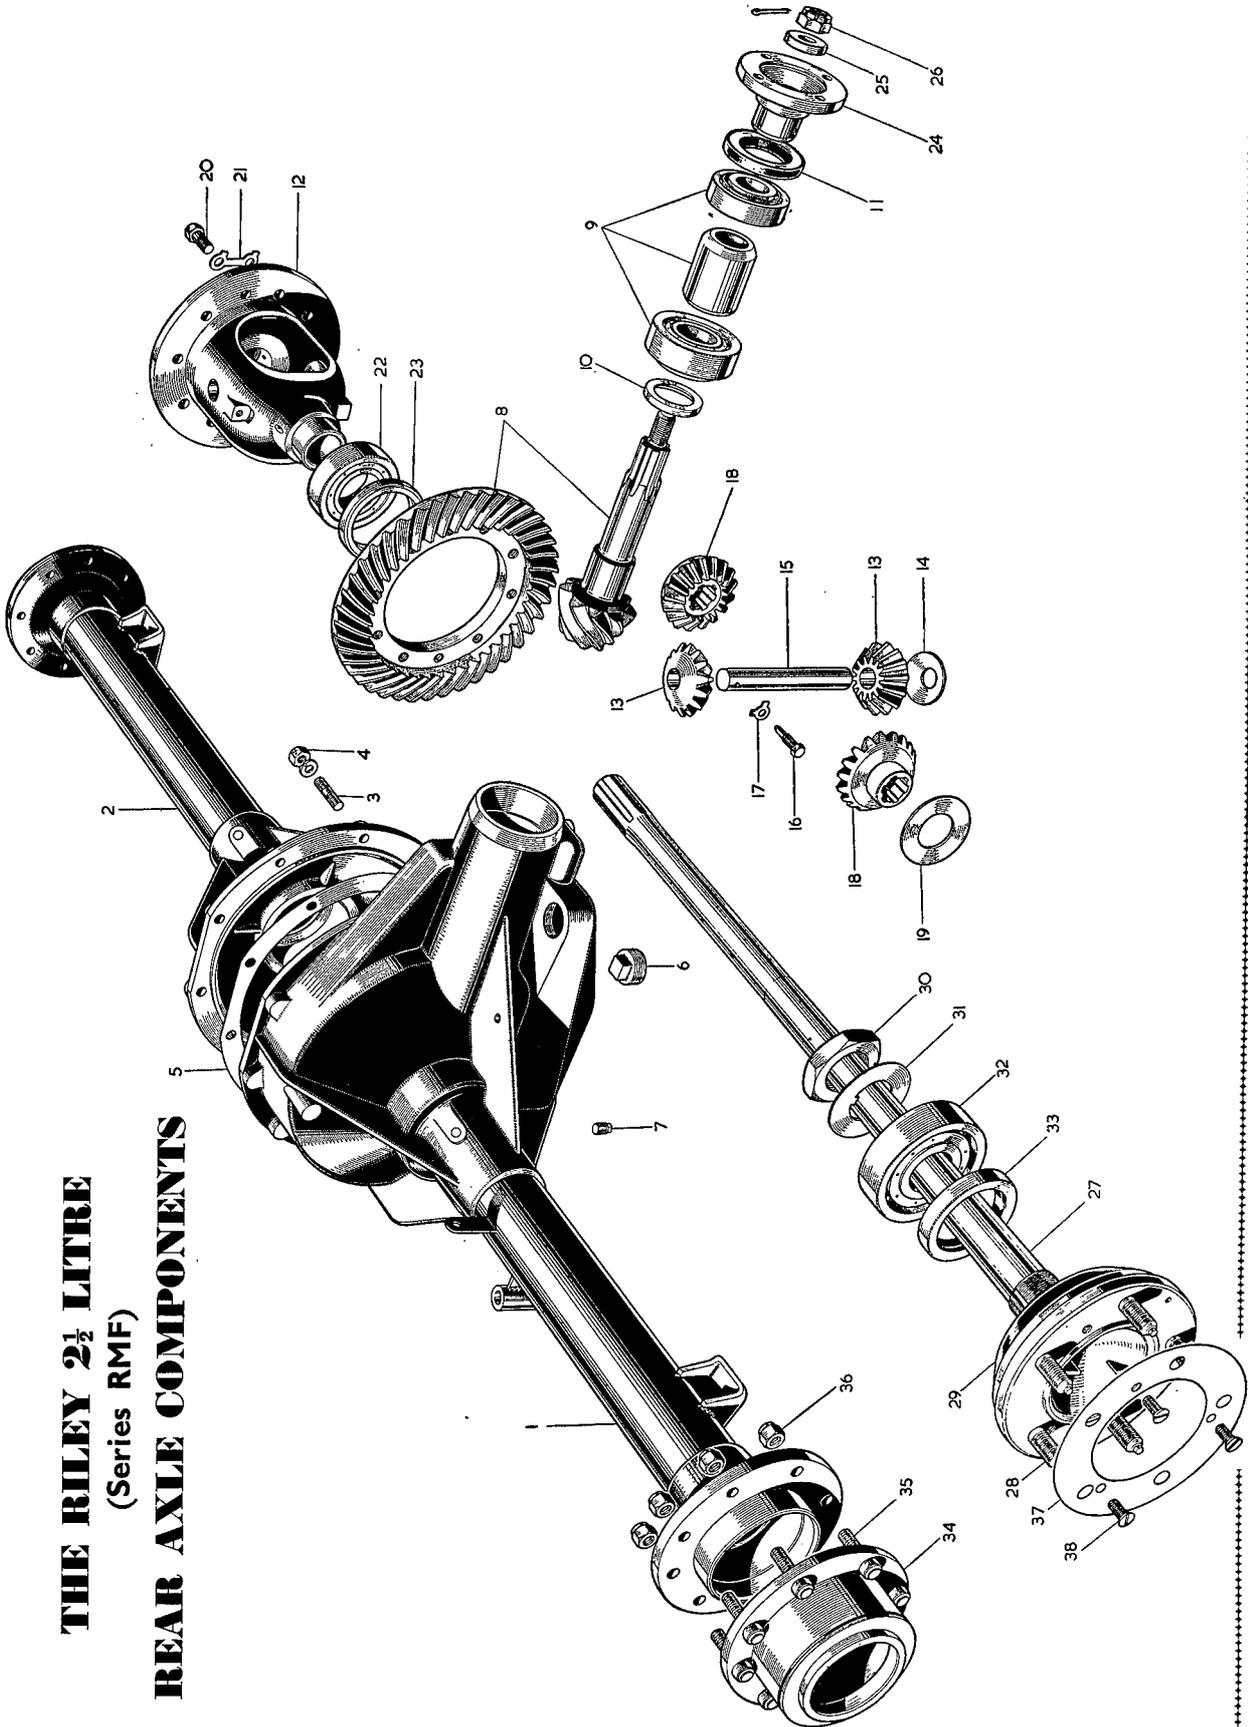

## KEY TO THE RILEY REAR AXLE COMPONENTS (2½ LITRE—Series RMF)

No.	Description	No.	Description	No.	Description
1.	Tube (R/H) and case—rear axle.	14.	Washer—differential pinion.	27.	Axle shaft and hub assembly.
2.	Tube (L/H) and case cover—rear axle.	15.	Pin—differential pinion.	28.	Stud—rear wheel.
3.	Scud—rear axle case.	16.	Bolt (locking)—pinion pin.	29.	Shield—oil—rear hub.
4.	Nut—axle case to cover.	17.	Tab washer—pinion pin locking bolt.	30.	Nut—lock—axle shaft.
5.	Joint (gasket)—axle case and cover.	18.	Gear—differential.	31.	Tab washer—axle shaft locknut.
6.	Plug—oil filler.	19.	Washer—differential gear.	32.	Bearing—rear hub.
7.	Plug—drain.	20.	Bolt—crown wheel.	33.	Seal—oil.
8.	Crown wheel and pinion.	21.	Locking tab—crown wheel bolt.	34.	Housing—rear hub bearing.
9.	Bearing assembly—pinion—front.	22.	Bearing—differential.	35.	Stud—serrated.
10.	Washer—distance—pinion—rear.	23.	Collar—distance—differential.	36.	Nut—serrated stud.
11.	Seal—oil—pinion—front.	24.	Flange—universal joint.	37.	Joint (gasket)—brake-drum.
12.	Cage—differential.	25.	Washer—universal joint flange nut.	38.	Screw—fixing—brake-drum.
13.	Pinion—differential.	26.	Nut—universal joint flange.		



The following operations are possible without the use of special tools :—

- (a) To replace a crown wheel and pinion with a pair carrying markings which are identical to those of the originals.
- (b) To replace a crown wheel bearing alone, since these are of the controlled-width type, provided genuine **Riley** replacements are used.
- (c) To replace an axle cover which carries markings identical to those of the original.

The following replacements are possible by calculations alone :—

- (d) To replace the differential cage by one carrying a different marking to that of the original.
- (e) To replace an axle cover carrying different markings to those of the original.

The following replacements can be carried out by calculation and the use of special tools :—

- (f) To replace an axle case carrying different markings to those of the original.
- (g) To replace a crown wheel and pinion carrying different markings to those of the originals.
- (h) To replace bearings to the pinion shaft.

Fig. HH.4.

The differential and crown wheel assembly with the ball races in position on the differential cage. The bolt locking the shaft for the differential pinions is clearly seen at the lower right-hand corner of the cage.

Operations (a), (b) and (c) merely call for the fitting of the new parts in the positions occupied by the old. The remaining operations entail special precautions and are detailed subsequently.

The axle or half-shafts, rear hub bearings, brake-drums and shoe mechanism can all be dismantled and replaced with the axle in position on the car.

## Section HH.5

### DISMANTLING THE AXLE AND REMOVING THE DIFFERENTIAL ASSEMBLY

Remove the axle from the car as detailed in Section HH.3.

To dismantle the axle, first remove the hub and brake plate assemblies as in Section HH.1.

HH.6


Remove the series of bolts joining the axle casing and cover together and carefully part them, taking care to see that both halves of the axle are suitably supported to avoid damage to the differential assembly.

The withdrawal of the axle cover from the casing releases the differential and crown wheel assembly, which can now be withdrawn.

Note that spacers are fitted between the differential bearings and the bearing housings and that they are important as they control the position of the differential assembly in the axle.

It is essential that they be replaced in their original locations on assembly, so make a note of the positions from which they are removed.

**Note.**—All original spacers are marked o/s and n/s.

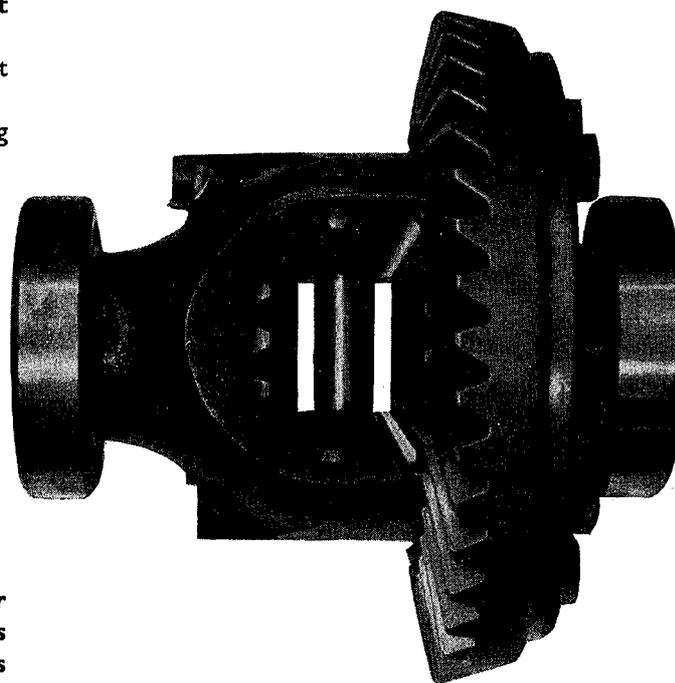

It must also be noted that the axle casing and cover are marked on the surface of one of the outside webs or tubes with one of the following figures :—Zero, 1, 2, 3, 4, 5, 6, all being positive.

## Section HH.6

### DISMANTLING THE DIFFERENTIAL AND CROWN WHEEL ASSEMBLY

When the differential assembly has been removed from the axle casing, as detailed in Section HH.5, it is dismantled by bending back the locking washer tab of the bolt locating the differential pinion shaft, withdrawing the bolt and removing the shaft.

The differential pinions can now be removed from the differential cage by swinging them round with their dished thrust plates until they register with the openings in the differential cage, through which they can be removed together with their distance-piece.


The differential cage gears can then be withdrawn from inside the differential through the openings, together with their thrust washers.

The crown wheel is attached to the differential cage by bolts locked by lock plates. Bending back the tabs of the lock plates and removing the bolts releases the crown wheel from the differential cage.

**Note.**—The crown wheels are marked on their back faces with one of the following figures :—+2, +1, Zero (or no marking), -1, -2.

Fig. HH.5.

The marking of the differential cage to indicate its assembly dimensions is clearly shown in this illustration, which bears a "C" dimension of .007 and a "D" dimension of .003.

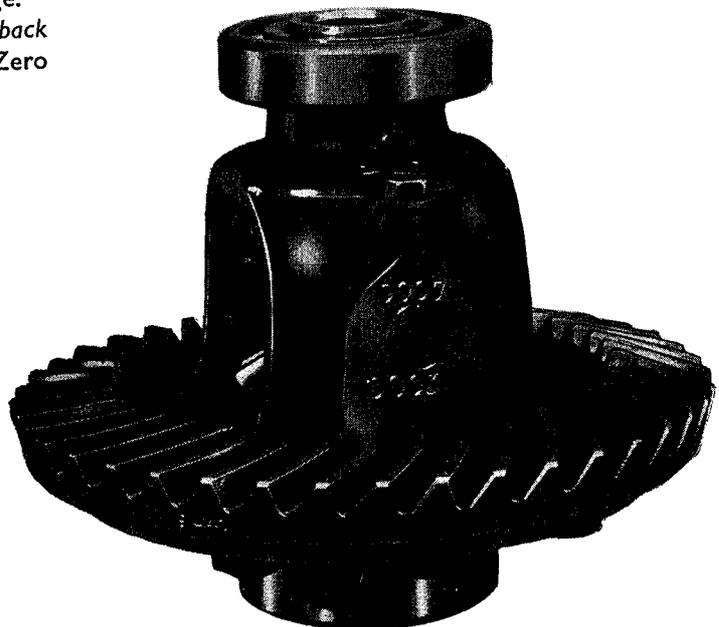

## Section HH.7

### EXAMINING PARTS FOR WEAR

Before examination all parts should be cleaned thoroughly.

The crown wheel bearings are of the ball type and should be renewed if necessary. They are controlled dimensionally and must be replaced only by **genuine Riley replacements**. Failure to observe this instruction will only lead to complications later.

The pinion shaft bearings are of the taper roller type and should be renewed, as a set, complete with distance-piece, if they do not run smoothly on their rollers.

The crown wheel and pinion are lapped in pairs.

**It is essential, therefore, that crown wheels and pinions be stored and used in pairs as originally supplied, otherwise satisfactory results cannot be obtained.**

If the inner races of the roller bearings are loose on the pinion, check with a new set of bearings, and if these are also loose on the pinion shaft it is an indication that the shaft has worn; a new crown wheel and pinion should be fitted.

Fractures in the teeth, hollows or any roughness on the surface of the teeth will render both crown wheel and pinion unserviceable.

The axle casing or axle cover (or both) should be renewed if new replacement bearings are not a light drive fit in the bores machined in their housings.

Any looseness of the bearings should be overcome by renewing the bearing, the axle cover or axle casing.

The cage should be replaced if there is excessive wear in the bores in which the differential gears revolve.

The oil seals should be renewed if they are not a press fit in the pinion housing or wheel bearing housing, or if their central portion is loose in the outer metal casing, or if the spring is fractured or broken.

The differential gears, pinions and pins should be renewed if there is any doubt about their condition, although more latitude in wear is permissible in these parts without detrimental effects than is the case with the crown wheel and pinion.


## Section HH.8

### TO REPLACE A DIFFERENTIAL CAGE

*Selecting an axle casing spacer*

All differential cages are stamped with two letters—"C" and "D"—together with a figure. The prefix "C" indicates the dimension over the differential bearings, and the dimensional range is from 0 in. to .012 in. "D" indicates the dimension from the crown wheel back face to the outside face of the

**THE REAR AXLE OF THE RILEY 2½ LITRE IN SECTION**  
(Series RMF)

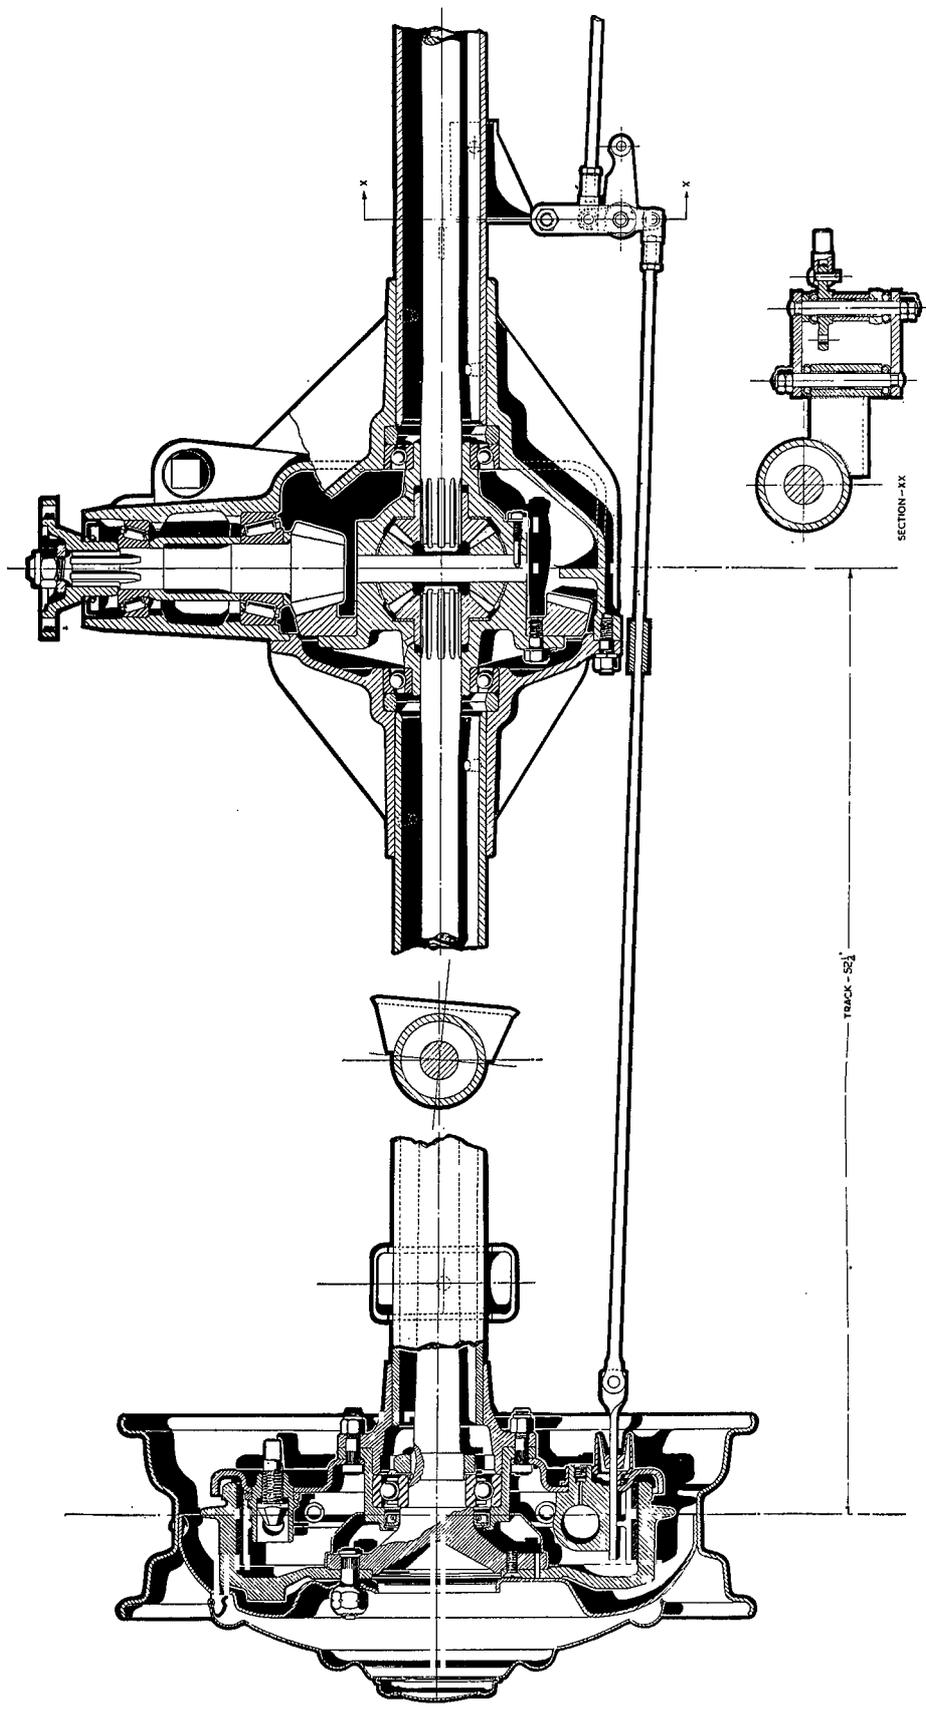

right-hand bearing outer race, and the range is from 0 in. to  $+0.006$  in.

Differential cages can be interchanged by applying the following procedure :—

Balance the "D" dimensions of the two cages and from the result select differential bearing spacers which will produce the same final location of the crown wheel on assembly.

Example (1) If the "D" dimension of the old cage was  $.005$  in. and the "D" dimension on the new cage is  $.002$  in., giving a difference of  $+0.003$  in., then this difference must be **added** to the old spacer thickness.

If the resultant of the dimensions on the new cage is greater than that on the old cage, the new spacer for the axle cover is less than the old one by the difference and vice versa.

Example (1) Old : "C"  $.006$  in.—"D"  $.005$  in.  
=  $.001$  in.

New : "C"  $.007$  in.—"D"  $.002$  in.  
=  $.005$  in.

The resultant with the new cage is the greater by  $.004$  in., therefore the new spacer should be  $.004$  in. **less** in thickness than the old one.

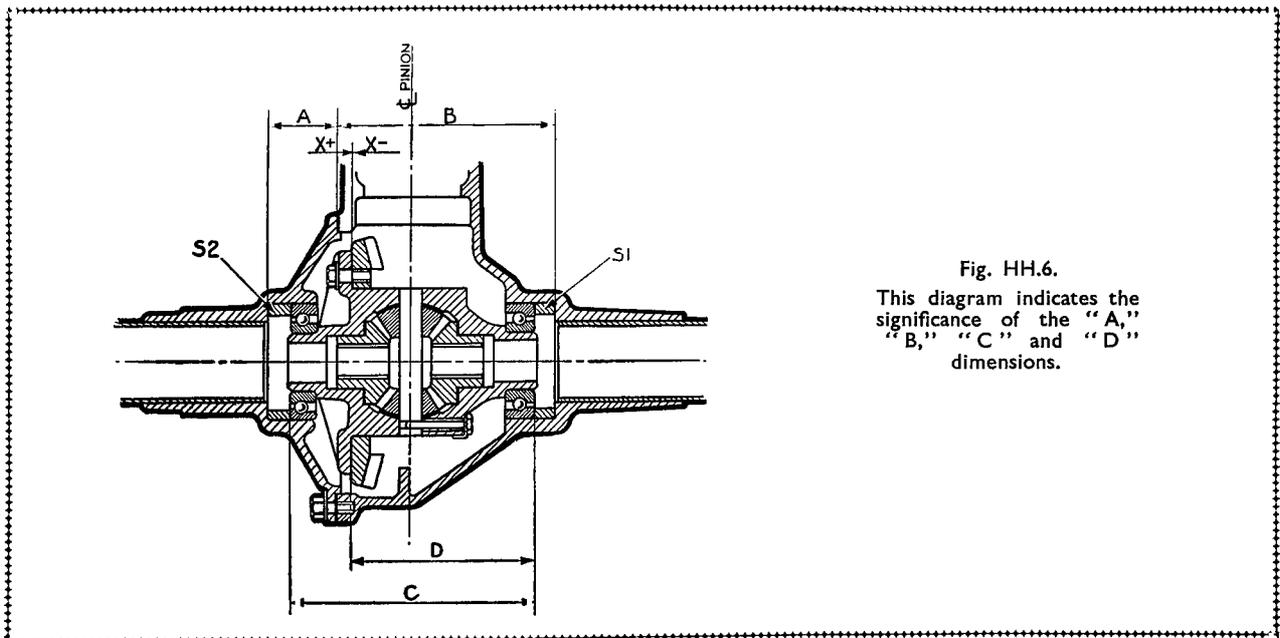


Fig. HH.6.  
This diagram indicates the significance of the "A," "B," "C" and "D" dimensions.

That is to say, if the old spacer is marked  $.503$  in. the new spacer must be  $.506$  in. thick.

Example (2) If the "D" dimension of the old cage was  $.001$  in. and the "D" dimension on the new cage is  $.005$  in., giving a difference of  $-0.004$  in., then this difference must be **subtracted** from the original spacer thickness.

That is to say, if the old spacer was  $.509$  in. thick, then the new spacer must be  $.505$  in. thick.

#### Selecting an axle cover spacer

In this case subtract the "D" dimension from the "C" dimension on both the old and new differential cages.

Example (2) Old : "C"  $.002$  in.—"D"  $.001$  in.  
=  $.001$  in.

New : "C"  $.001$  in.—"D"  $.005$  in.  
=  $-.004$  in.


The old resultant is here the greater by  $.005$  in., therefore the new spacer must be  $.005$  in. thicker than the old one.

## Section HH.9

### ASSEMBLING DIFFERENTIAL AND CROWN WHEEL

The differential is assembled by first inserting the differential gears inside the differential cage with their thrust washers in position.

**THE RILEY 1½ LITRE  
(Series RME)  
REAR AXLE COMPONENTS**

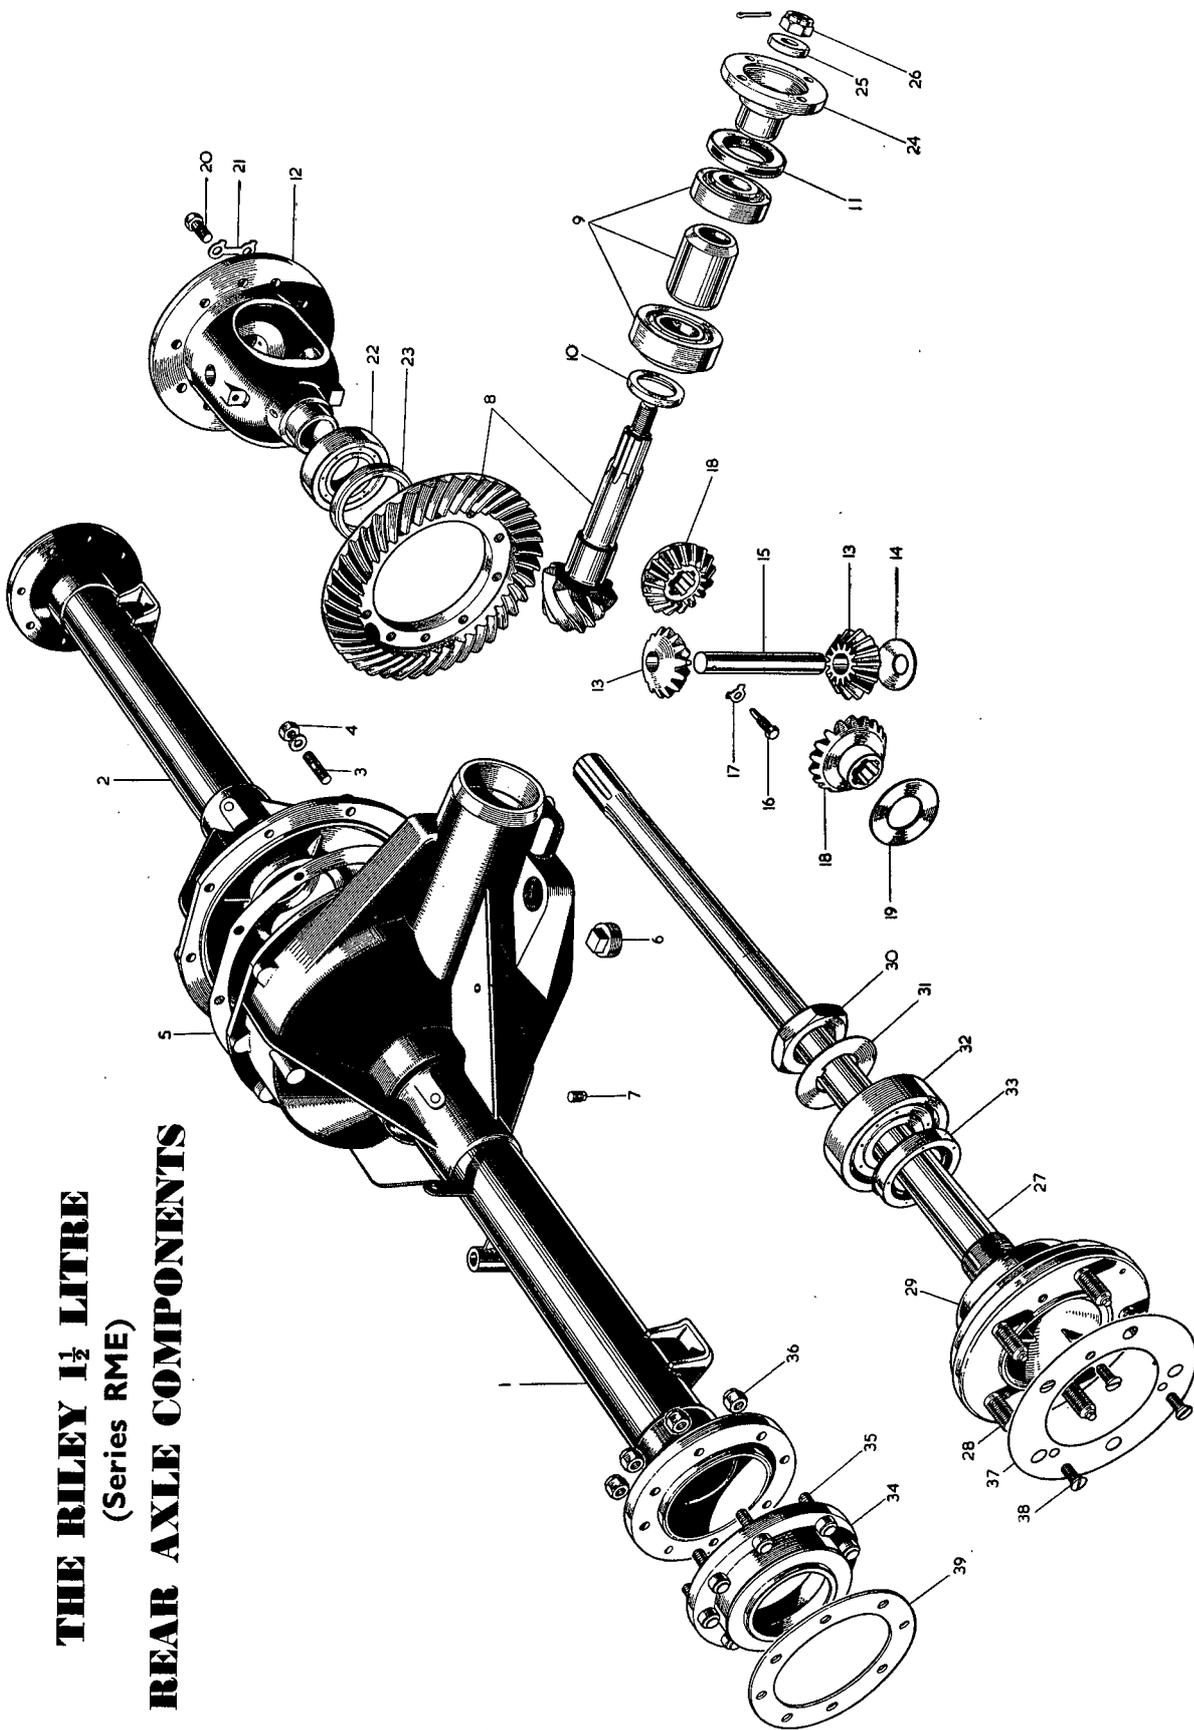

## KEY TO THE RILEY REAR AXLE COMPONENTS (1½ LITRE—Series RME)

No.	Description	No.	Description	No.	Description
1.	Tube (R/H) and case—rear axle.	14.	Washer—differential pinion.	27.	Axle shaft and hub assembly.
2.	Tube (L/H) and case cover—rear axle.	15.	Pin—differential pinion.	28.	Stud—rear wheel.
3.	Scuds—rear axle case.	16.	Bolt (locking)—pinion pin.	29.	Shield—oil—rear hub.
4.	Nut—axle case to cover.	17.	Tab washer—pinion pin locking bolt.	30.	Nut—lock—axle shaft.
5.	Joint (gasket)—axle case and cover.	18.	Gear—differential.	31.	Tab washer—axle shaft locknut.
6.	Plug—oil filler.	19.	Washer—differential gear.	32.	Bearing—rear hub.
7.	Plug—drain.	20.	Bolt—crown wheel.	33.	Seal—oil.
8.	Crown wheel and pinion.	21.	Locking tab—crown wheel bolt.	34.	Housing—rear hub bearing.
9.	Bearing assembly—pinion—front.	22.	Bearing—differential.	35.	Stud—serrated.
10.	Washer—distance—pinion—rear.	23.	Collar—distance—differential.	36.	Nut—serrated stud.
11.	Seal—oil—pinion—front.	24.	Flange—universal joint.	37.	Joint (gasket)—brake-drum.
12.	Cage—differential.	25.	Washer—universal joint flange nut.	38.	Screw—fixing—brake-drum.
13.	Pinion—differential.	26.	Nut—universal joint flange.	39.	Spacer—rear—brake plate.



**Note.**—When new washers are fitted it is necessary to see that they are properly bedded in or it may be difficult to insert the pinions.

The differential pinions are next inserted through the opening of the cage with their distance-pieces and thrust washers. The pinions are then rotated in the cage until they register with the holes in the cage for the shaft.

The pinion spindle, which should be a light push-fit in the cage, is then inserted, taking care to line up the locking bolt holes.

The differential ball races can now be pressed on.

If a new crown wheel or differential cage has been fitted it is essential to measure the "C" dimensions over the differential ball races, and "D" dimensions from the crown wheel back face to the right-hand bearing outer race outside face, and inform the Service Department at Cowley of the change of components, quoting the new dimensions so that the necessary modification can be made to the axle history card for future reference.

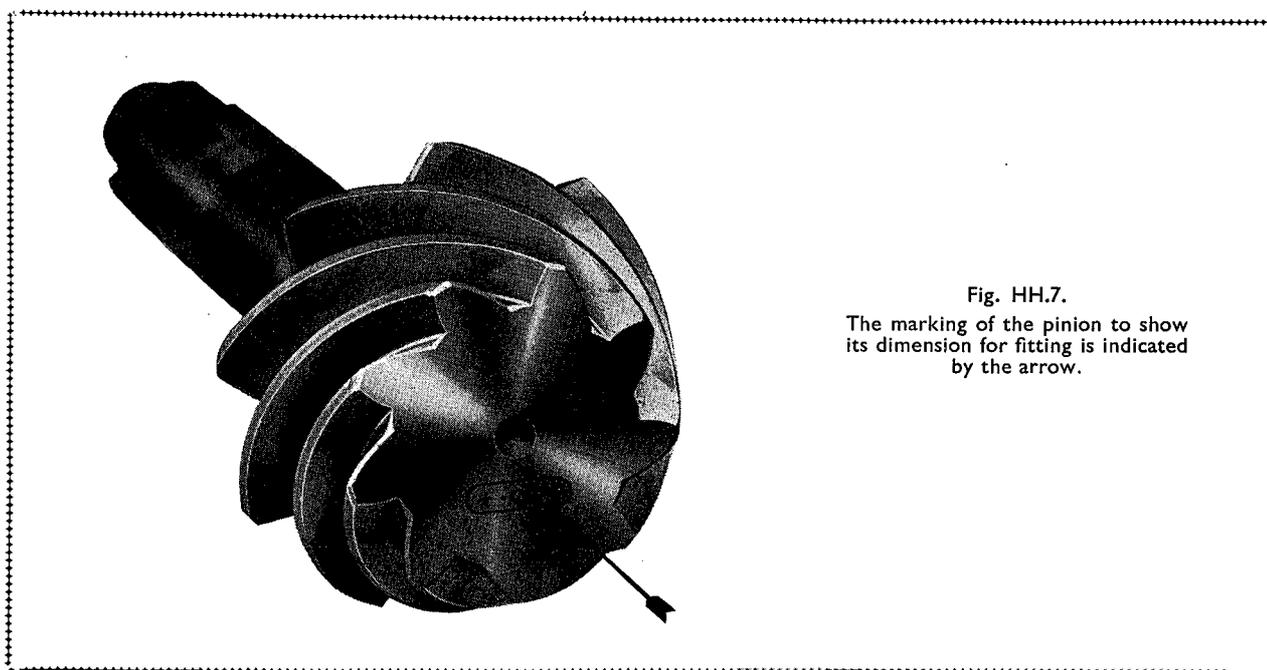


Fig. HH.7.

The marking of the pinion to show its dimension for fitting is indicated by the arrow.

**Note.**—The slot in the shaft can be used as a guide.

Fit the locking bolt and turn up the tab of its locking washer.

Fit the crown wheel to the differential cage after making sure that the mating surfaces are perfectly clean and the edges free from burrs.

Check the crown wheel for truth by spinning the assembly on a roller fixture with a dial gauge registering against the outer edge of the crown wheel. The maximum permissible error of alignment is .001 in. (.025 mm.), and if the figure registered is in excess of this the crown wheel should be removed from the differential cage and the flange of the cage checked for truth. If necessary, fit a replacement cage.

Provided the flange is true within the permissible error, clean all parts carefully and reassemble the crown wheel to the cage in a different position to that in which it was first assembled and checked, then re-check. This process should be repeated several times before finally deciding to discard the crown wheel and pinion.

## Section HH.10

### TO REPLACE PINION


- The old pinion in a new axle casing.
- New pinion and new matched set of bearings and distance-piece in an old casing.
- New pinion and old bearings and distance-piece in an old casing.
- Old pinion and new matched set of bearings and distance-piece in an old casing.

In all cases the pinion must be set accurately in the axle casing, remembering that the roller races and their distance-pieces are supplied in sets giving the correct amount of pre-load on assembly. They can, therefore, only be replaced as "sets" and not individually.

The pinions may be marked on their heads with one of the following figures:—

A ringed figure +2, +1, Zero (or no marking), -1, -2, and possibly an unringed figure -1 or -2.

**THE REAR AXLE OF THE RILEY 1½ LITRE IN SECTION**  
(Series RME)

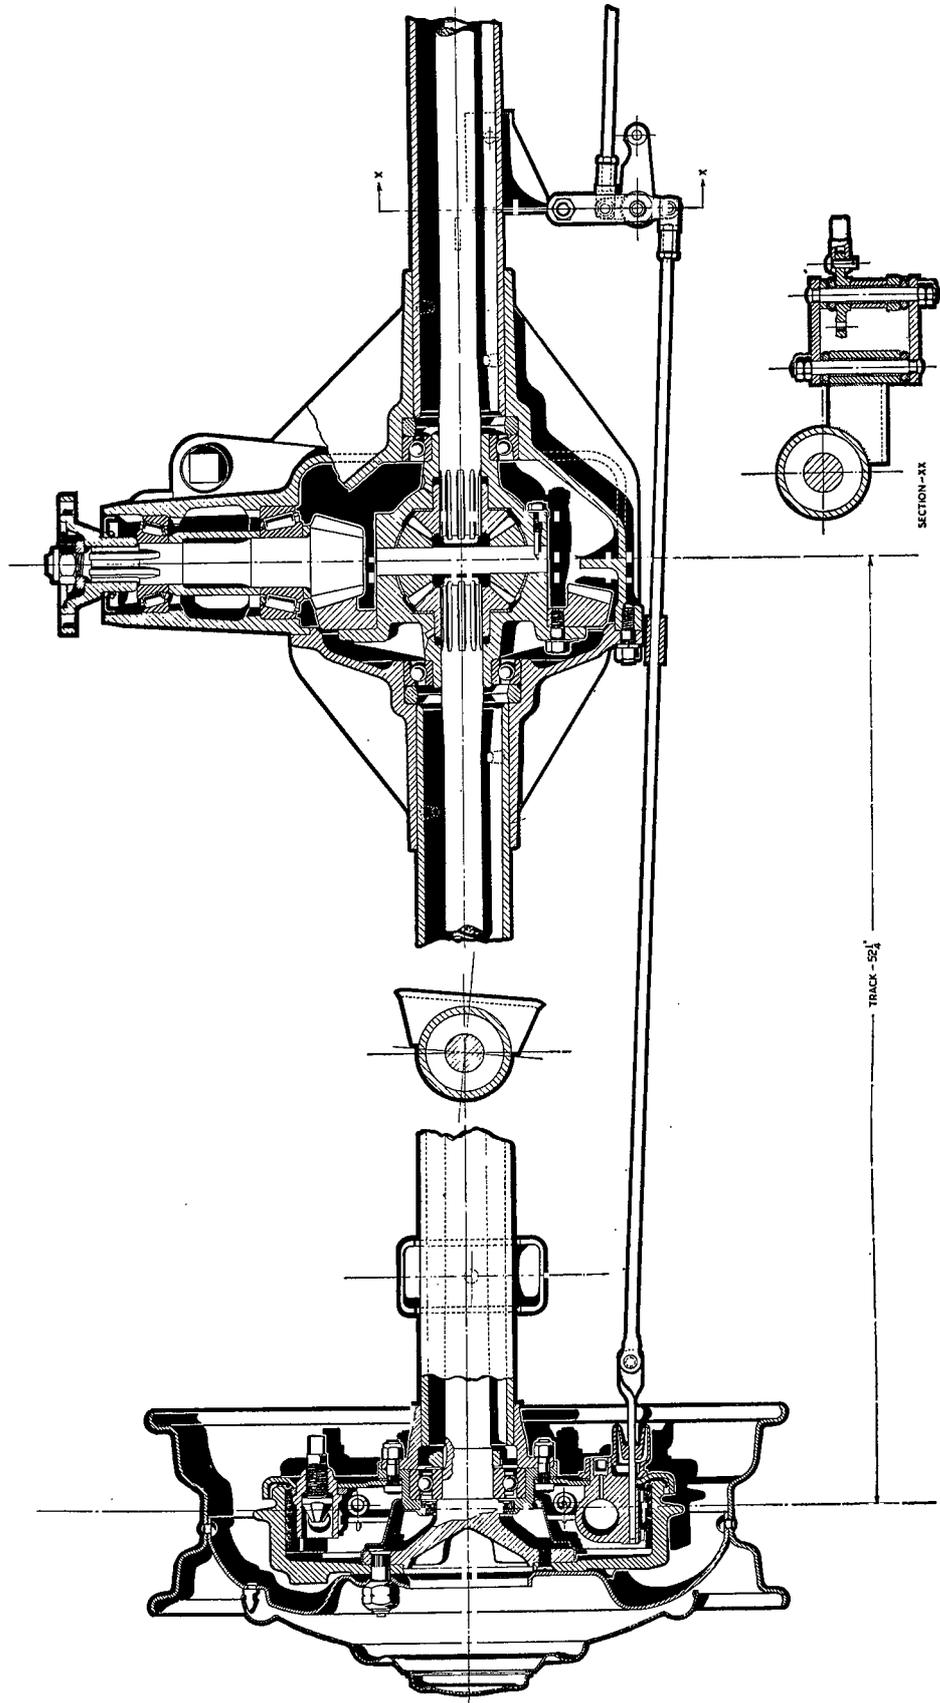

The pinion washer controls the position of the pinion in relation to the axis of the crown wheel, and it is fitted between the head of the pinion and its rear bearing.

Adjustment of the pinion position is made by varying the thickness of the pinion washer. These are available in a range of thickness varying by .001 in.

(.025 mm.) and are marked on spares replacements only.

The pinion is fitted to the axle in the following way :—

Fit the pinion bearing outer races in the pinion housing, then assemble the rear pinion bearing inner race to the special dummy pinion spindle (special

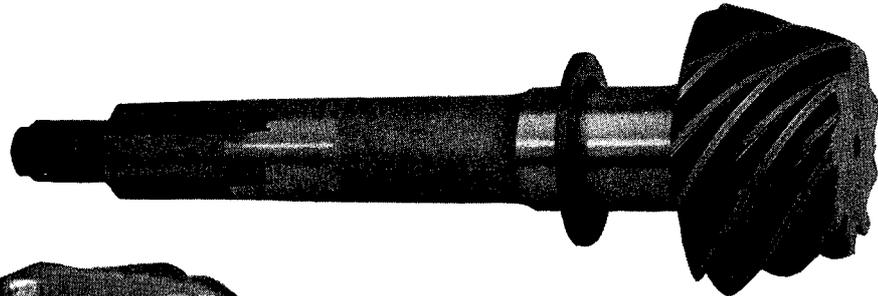


Fig. HH.8.

The pinion and pinion spacing washer. Note that the bevelled side of the washer bore should be against the pinion.

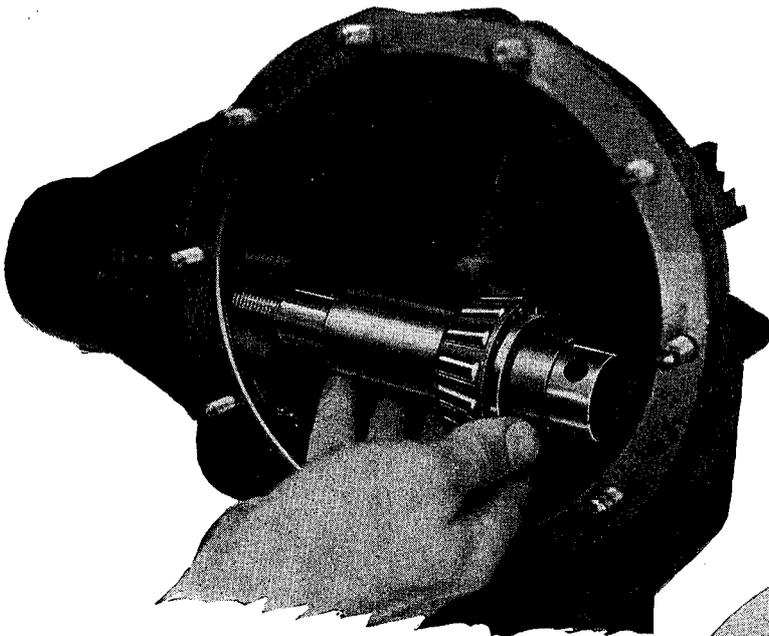


Fig. HH.9.

Inserting the special dummy pinion shaft into the axle casing pinion housing.

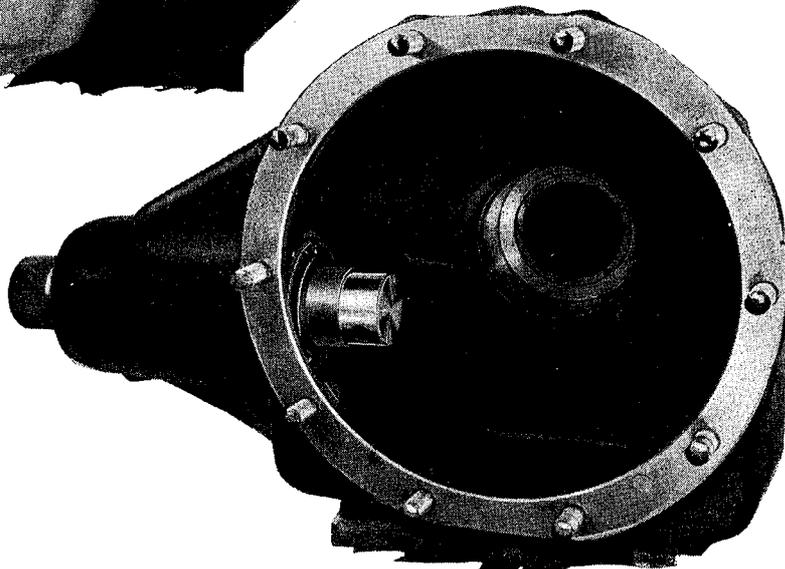


Fig. HH.10.

The dummy pinion shaft in position in the housing. The ground head of the dummy shaft forms the datum for establishing the correct thickness for the spacing washer.

tool No. 68892), and place in position in the housing, inserting it through the cover opening in the axle casing.

Fit the front bearing inner race.\*

Fit the spindle nut and tighten it up to give the correct pre-load torsional resistance of 14 to 16 lbs. ins. (.161 to .184 kg./m.) to the bearings.

Rotate the spindle eight or ten times to seat the bearings.

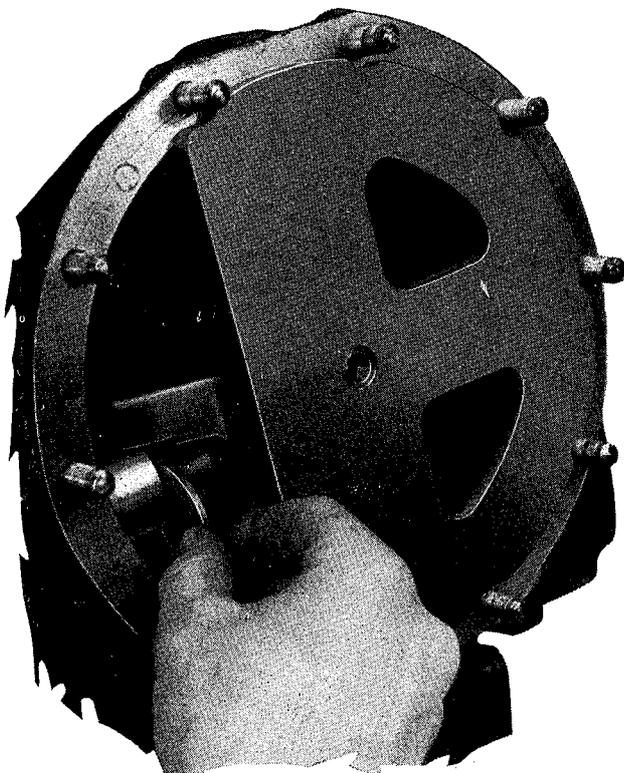


Fig. HH.11.

(Above.) When the locating tongue of the special checking fixture is in contact with the head of the dummy pinion spindle the space between the head of the spindle and the anvil of the checking fixture determines the thickness of the pinion spacing washer.

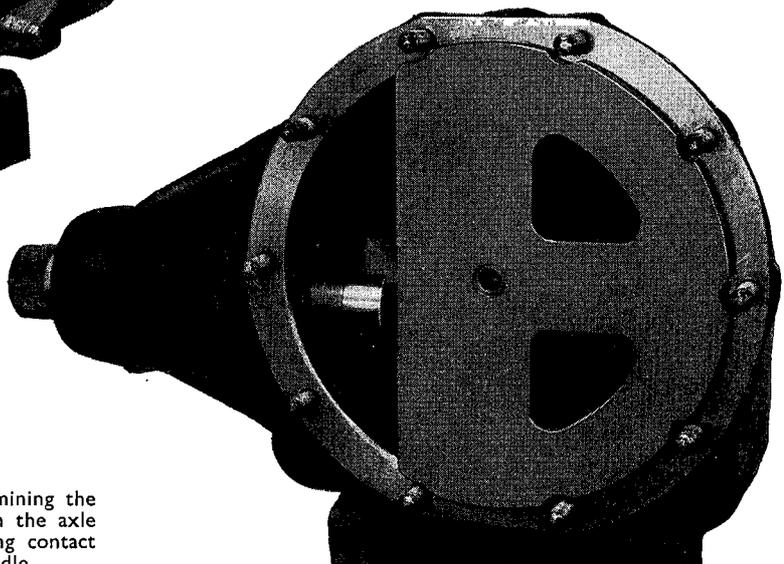


Fig. HH.12.

(Right.) The special checking fixture for determining the correct spacing washer thickness in position in the axle casing. Note that its locating tongue is making contact with the head of the dummy pinion spindle.

Fit the checking fixture (special tool No. 68892) in the axle cover opening and make sure that the locating arm makes firm contact with the side of the dummy spindle head. (See Fig. HH.12.)

\*NOTE.—The bearing spacer is omitted, because the correct pre-load can only be obtained with the bearing spacer in position if the universal joint flange is locked up tight. This is due to the calculated compression of the bearing spacer under this locking load.

This leaves a gap between the dummy pinion head and the checking anvil of the fixture, and this is the actual thickness of the pinion washer required for a standard pinion or one that has no marking.

Select a washer which will just slide between these faces and fit it behind the pinion head when re-assembling.

To assist manufacturing conditions it is occasionally necessary that a pinion be assembled away from the standard position. If this is so the variation is marked on the pinion head in a ring such as (+2), the sign + meaning that the centres are increased by .002 in. Correction has to be made for this, and when the figure is + (plus) the amount must be **taken from** the washer thickness, and if the figure is — (minus), then the amount has to be **added** to the washer thickness.

Example (a) A washer fitting the gap of the dummy pinion with a marking of .127 must be replaced by a washer having the marking .129 when refitting a pinion with the marking —2 or —.002.

Example (b) A washer fitting the gap of the dummy pinion bearing the marking .127 must be replaced by a washer marked .125 when the pinion is marked +2 or +.002 on its head.

A plain or unringed figure may be marked on the pinion head in addition to a ringed figure, but this is only an indication of the variation of the pinion head thickness from standard and is always minus. It has no bearing on the pinion setting.

When the correct spacing washer has been decided upon, the actual pinion assembly can take place, **but**

the importance of making the measurements correctly must be appreciated, since it is impossible to check the adjustment when the axle is assembled.

The actual pinion assembly is carried out by threading the selected pinion washer on to the pinion shaft, bevelled side against the pinion, and pressing on the rear roller bearing inner race with its largest diameter against the washer. This sub-assembly is then inserted into the casing through the axle cover opening and located in position in the pinion housing of the axle casing.

select a new distance collar for the differential bearing in the manner here indicated.

Compensation for variations in the depth of the differential bearing bores is made by taking note of the markings on the old and new axle casings. For example :—

If the old casing is  $+002$  in. and the new one  $+004$  in., the positive difference  $002$  in. is added to the existing differential bearing distance collar. That is to say, if the old distance collar is marked  $0505$  in., then the required new distance collar is  $0507$  in.

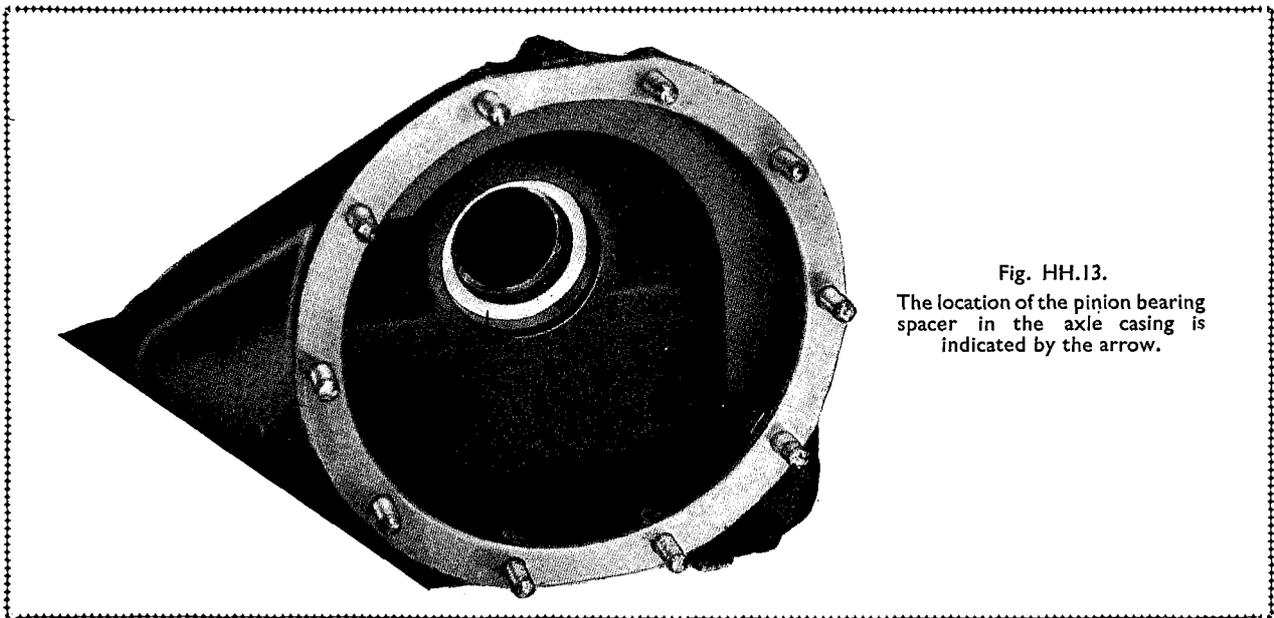


Fig. HH.13.  
The location of the pinion bearing spacer in the axle casing is indicated by the arrow.

The distance-piece and forward roller bearing inner race are next passed on to the pinion shaft, with the largest diameter of the inner race facing forward. These components are followed by the pinion flange with its retaining washer and nut. Tighten up the nut firmly.

Rotate the pinion to ascertain that the correct degree of pre-load is present. The pinion should present the same resistance to rotation as was evident when using the special dummy spindle.

If the pre-load is correct, undo the nut and remove the washer and flange ; fit the oil seal (sharp edge of the bore towards the bearing), replace the pinion flange, retaining washer and nut.

Finally tighten up the nut and fit the split pin.

## Section HH.11

### TO FIT A NEW AXLE CASING

When a new axle case is being fitted it is necessary to refit the pinion as detailed in Section H.11, and to

Similarly, if the old casing is  $+005$  in. and the new one  $+001$  in., the resulting difference is negative  $004$  in. and must be subtracted from the bearing distance collar, i.e. if the old distance collar is  $0509$  in., the required new distance collar is  $0505$  in.

The distance collars are manufactured in steps of  $0001$  in., and measurements should therefore be made to the nearest thousandth of an inch.

## Section HH.12

### TO FIT A NEW AXLE HOUSING COVER

When a new axle cover is being fitted it is not necessary to make any adjustment to the pinion.

Compensation must, however, be made for variations in the depth of the differential bearing housing in the same manner as that outlined for the axle casing in Section HH.11, and the same calculations for the selection of the required new distance collar for the differential bearings involved.

### Section HH.13

TO REPLACE A CROWN WHEEL AND PINION HAVING MARKINGS DIFFERENT TO THE ORIGINAL

**Note.**—The crown wheels and pinions are manufactured in matched pairs and are not replaceable individually but only in pairs. The necessity for replacing either a pinion or crown wheel therefore necessitates the fitting of a new pair of components, and the operations of fitting a new pinion and a new crown wheel are involved.

The crown wheels are marked on their back faces with one of the following markings: +2, +1, Zero (or no marking), -1 and -2.

### Section HH.14

REASSEMBLING THE AXLE

Provided that no replacement parts are fitted, the assembly of the axle is quite straightforward if proper note is taken of the positions of various distance-pieces, washers and spacers on dismantling, and they are replaced in exactly their original locations.

Assembly of the differential and crown wheel is described in detail in Section HH.9.

Assembly of the pinion housing is given in detail in Section HH.10.

The assembly of the axle cover to the axle casing is carried out with a gasket between their joint surfaces. The calculations made for adjustment provide

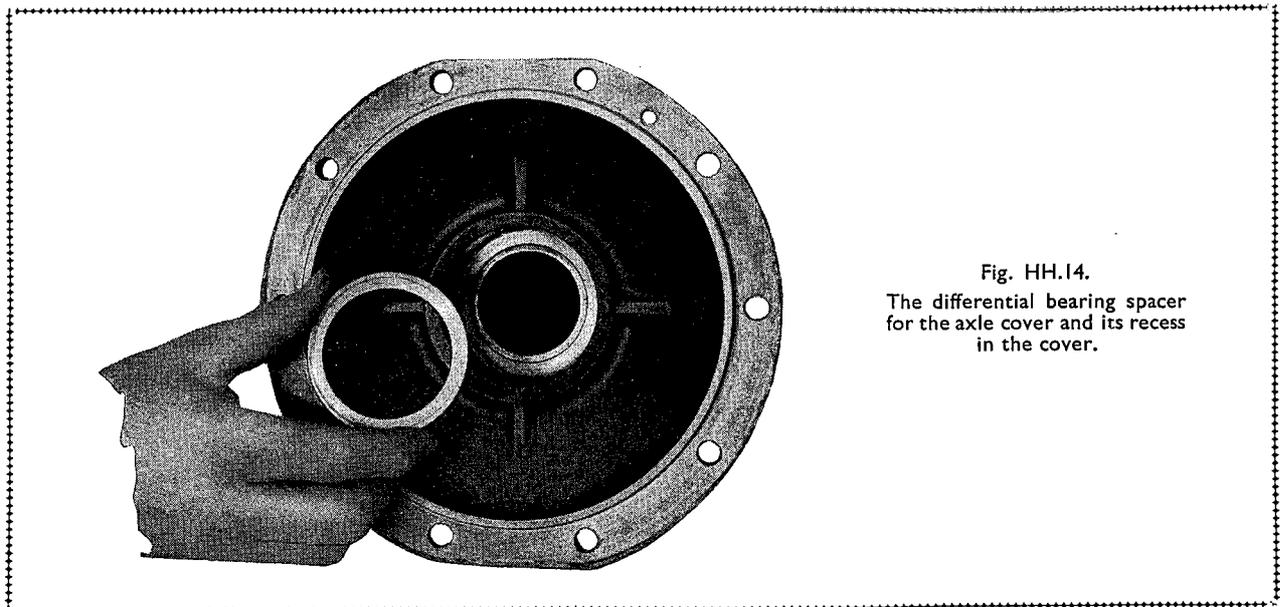


Fig. HH.14.  
The differential bearing spacer for the axle cover and its recess in the cover.

Read off the marking from the back face of the old crown wheel and note the difference between this and the marking on the new crown wheel.

For example: If the old one is marked -1 (-.001 in.) and the new one +2 (.002 in.), the dimensional difference is +.003 in. To reassemble correctly it is thus necessary to fit a new distance collar in the axle casing which is .003 in. **thicker** than the old one, and a new one .003 in. **thinner** than the old one in the axle cover.

Note that the **combined** thicknesses of these distance collars must remain the same.

The setting of the pinion is carried out as indicated in Section HH.10.

for the thickness of the gasket, but it is important that a genuine Riley replacement is used. (Thickness of gasket .005 in. (.125 mm.) when compressed.)

The differential assembly should be assembled in the axle casing, making sure that its bearing in the axle casing is right home in its housing and that a gasket is in position on the joint surface. The axle cover is then placed in position over the axle casing and carefully pushed home till the joint faces are in contact.

The ten nuts fastening the halves of the axle housing together are then screwed lightly in position and finally tightened up a quarter of a turn at a time in a diagonal sequence to ensure even tightening and absence of distortion.

Reassemble and replace the half-shaft, hub and brake

backplate assemblies as detailed in Sections HH.1 and HH.2.

Make sure that the pinion differential and axle half-shafts are free from undue restriction before replacing the axle in the car.

## Section HH.15

### REFITTING THE AXLE TO THE CAR

Replacing the assembled axle in position on the car is a direct reversal of the removal procedure detailed in Section HH.3.

Wheel the axle into position on a suitable jack and replace the rear shackles, making sure that the flanged rubber bushes are in good condition before fitting them. The shackle retaining nuts are self-locking and must be checked to ensure that they are not damaged before they are replaced ; they should be tightened

only when the weight of the car, loaded to its normal running load, is taken by the axle and springs. This allows the bushes to take up their normal working positions and prevents overstressing through excessive flexing in one direction, which takes place if the bolts are tightened while the springs are in the non-loaded position.

Check the rubber bushes in the telescopic damper attachments brackets and fit new bushes if necessary.

Position the damper plates and replace the " U " bolts.

Reconnect the propeller shaft to the axle pinion flange, aligning the marks made when dismantling to ensure that the shaft is in the original position.

Reconnect the flexible brake hose at the union bracket and attach the hand-brake cable to the balance lever.

Bleed the brakes as detailed in Section MM.4.